


Comment entrer le code BISS sur les récepteurs

ECHOLINK ZEN
ECHOLINK ZEN LITE
ECHOLINK ZEN PLUS
ECHOLINK ZEN 2

Allez à la chaîne que vous voulez voir, dans notre cas on va à la chaîne algérienne programme national sur Nilesat 7W

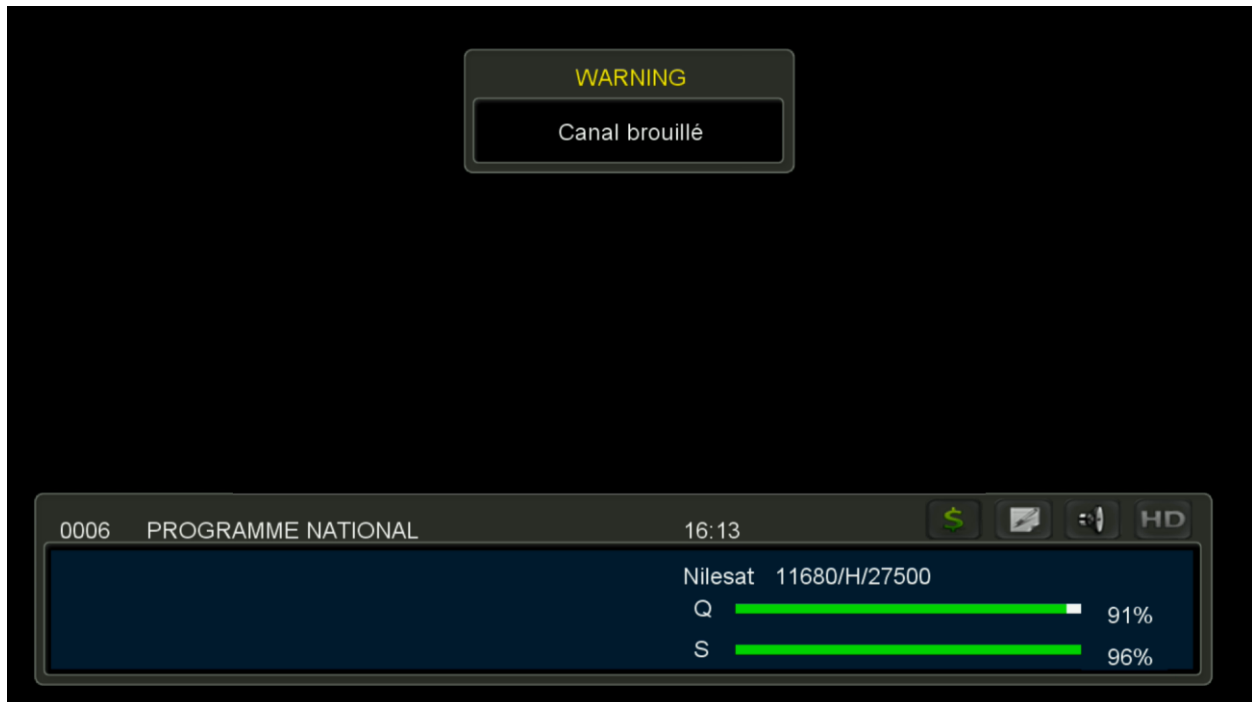

Appuyez sur le bouton PAG+ de votre télécommande



Mettez ce code BISS 1100000000000000

A screenshot of a configuration menu on a black background. On the left, there are four labels: 'Key', 'CAS ID', 'IDENT', and 'Index'. To the right of each label is a corresponding input field. The 'Key' field contains the hexadecimal value 'AA AA 00 54 00 00 00 00'. The 'CAS ID' field is empty and highlighted in green. The 'IDENT' field contains '00 1F FF'. The 'Index' field contains '07'. Below the fields, there are two options: a red dot followed by 'éditer' and a green dot followed by 'éditer Constant DW'.

Après avoir entré le code, veuillez cliquer sur OK

A screenshot of the same configuration menu. The 'Key' field now contains the binary code '1100000000000000', with the final '0' highlighted in blue. The 'CAS ID' field remains empty and highlighted in green. The 'IDENT' field contains '00 1F FF' and the 'Index' field contains '07'. On the left side, there is a vertical stack of buttons labeled 'A', 'B', 'C', 'D', 'E', 'F', and 'OK'. The 'OK' button is highlighted in yellow. The 'éditer' and 'éditer Constant DW' options are still present at the bottom.

La chaine va se décryptée

