شرح كيفية البحث عن القنوات لأجهزة

ECHOLINK FEMTO PRO 2 ECHOLINK FEMTO PRO 2 ECHOLINK FEMTO PRO 3 ECHOLINK FEMTO PRO 4 ECHOLINK FEMTO PRO 5 ECHOLINK FEMTO PRO 6 ECHOLINK FEMTO LITE 2 ECHOLINK FEMTO LITE 3 ALPHAVISION AMIGO 2 ECHOLINK GRAND PRO





2) إضغط على **'Installation**'



3) أدخل إلى **'Configuration antenne**'

Installation		ECHOLINK 🛃
() () () () () ()	Configuration antenne DiSEqC réglage moteur recherche rapide Valeurs par défaut Patch Menu	
Déplacer	OK Menu	

4) حدد القمر الدي تريد تم اختر مدخل LNB الخاص بالقمر في حالة كنت تتوفر على سويتش

	Satellite	Nilesat (7W)
3 0	Franspondeur	10727/H/27500/8/9
, I	Fréquence LNB	Universel
	Alimentation LNB	13V/18V
1	22KHz	Auto
1	DiSEqC Type	Aucun
í I	DiSEqC 1.1	Aucun
1	Mode Moteur	Aucun
T T	Node de Balayage	Tous les Canaux
Sat	ellite	Multi-Sat Recherche Aveu
s ∎	 00%	Q = 00%

	Satellite	Nilesat (7W)	
	Transpondeur	10727/H/27500/8/9	
	Fréquence LNB	Universel	
0.0	Alimentation LNB	13V/18V	
12	22KHz	Auto	
	DiSEqC Type	LNB4	
	DiSEqC 1.1	Aucun	
	Mode Moteur	Aucun	
	Mode de Balayage	Tous les Canaux	
<u>ا</u>	Satellite	Multi-Sat Recherch	e Aveug
Ś	°s	7% q ———————————————————————————————————	- 82%

5) إضغط على الزر الأحمر إدا كنت تود القيام ببحت عادي و سـريع ، أو الضغط على الأزرق إدا كنت تود القيام ببحت أعمى , هنا سـوف نختار البحت الأعمى

	Configuration antenne	ECHOLINK	Ż
	Satellite	Nilesat (7W)	1
	Transpondeur	10727/H/27500/8/9	I
	Fréquence LNB	Universel	L
100	Alimentation LNB	13V/18V	L
	22KHz	Auto	L
	DiSEqC Type	Aucun	L
- <u></u>	DiSEqC 1.1	Aucun	I
	Mode Moteur	Aucun	L
	Mode de Balayage	Tous les Canaux	I
	atellite Transpondeur	Multi-Sat Recherche Aveug	
A	s 🚍 — 00%	Q = 00%	
	Déplacer		

بدء البحت عن القنوات

	Recherche Aveugl				
	Scan Time 00:02				
	Get TP [2] New TP				
(a) ²					
Ä					
Ø	0001 10726 H 27500 Auto 0002 10815 H 27500 Auto				
<u> </u>	Nilesat (7W)				
	Progrès 🕘 😳 😳 😳 😳 😳 😳 😳 😳				

مبروك عليك تم إلتقاط القنوات بنجاح



إلى اللقاء في تدوينات اخرى